




## Standard SMW7S / SM07S System: Trailer Installation

### Required Components for Installation:

- 1) \*20 m./ 65' F-F camera cable used in trailer
- 1) \*C300P Camera
- 1) \*ADD300Z Camera Cover
- 1) \*\*CBS202 Socket
- \* included in SMW7S
- \*\* included in CBK202

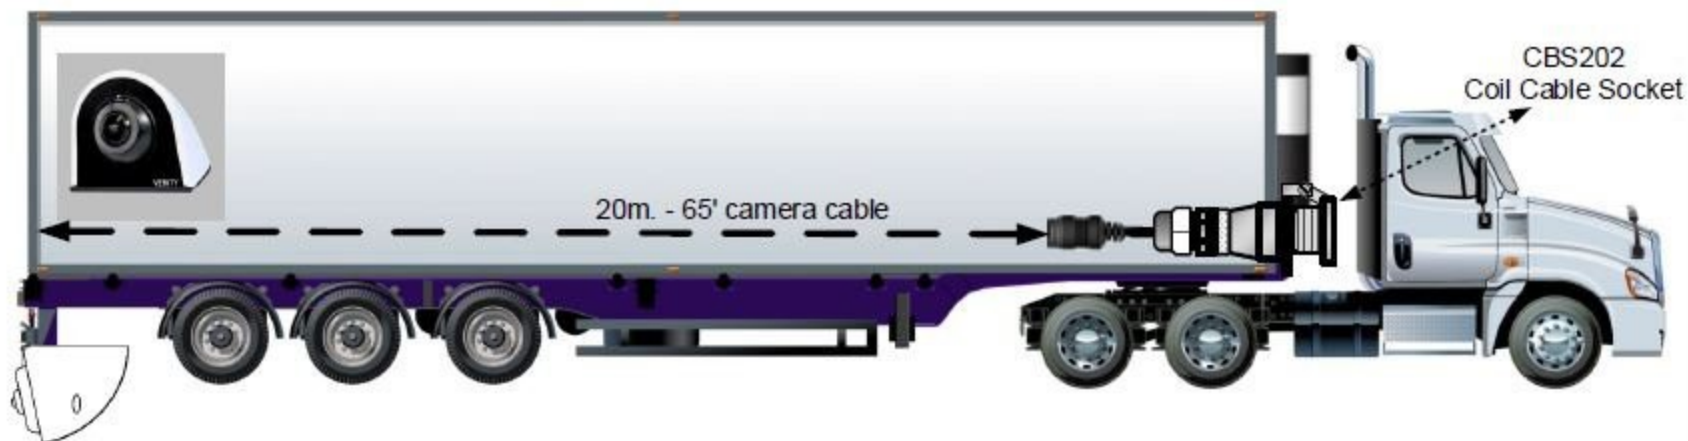

574-807-6002  
www.verityvs.com  
All rights reserved.

**NOTICE**  
Diagram is for reference purpose only  
Subject to change without notice. Not to Scale

Parts layout for  
Standard Trailer